


Actiontec® 1520 and 1524

How to Setup a PPPoA Single Static IP Address .49 Firmware

1. Open your Web browser (Microsoft® Internet Explorer or Netscape®). In the location or address bar, type **192.168.0.1**. Select **Enter**.

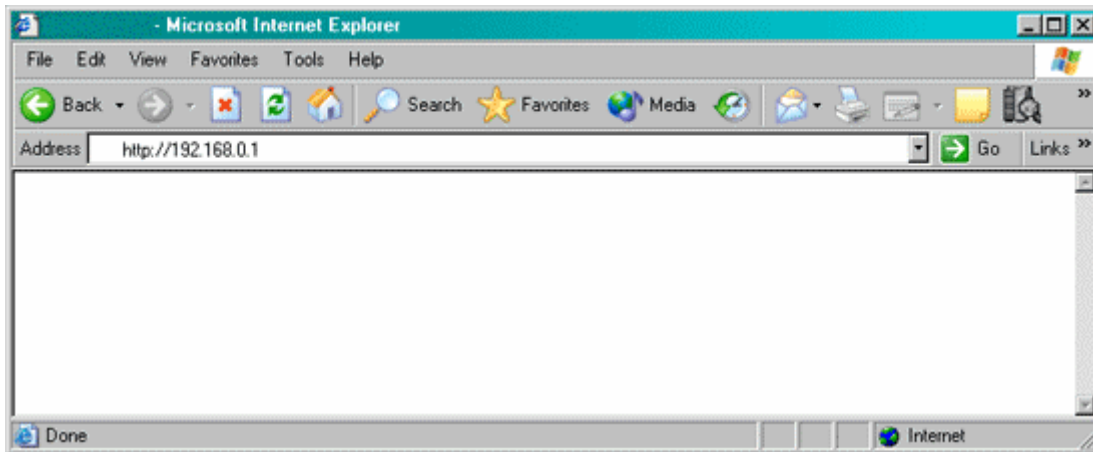

2. Select **Setup / Configuration**.



3. Select **Non-Windows Setup**.

Actiontec™

[Main] [Setup] [Status] [Utilities] [Help]

Basic Setup

- Change Admin Password
- Advanced Setup
- Non-Windows Setup

Set Up / Configuration

This section will guide you through the configuration of your DSL Gateway.

In most cases, only Basic Setup is required. In the event that you can not access the Internet after completing the Basic Setup, it is possible that your Internet Service Provider may require additional configuration.

In this case, use the Advanced Setup process to configure your DSL Gateway by clicking on the **Advanced Setup** option from the menu to the left.

Please click the **"Begin Basic Setup"** button below to start the basic setup.

Copyright 2001 Actiontec Electronics Inc.

4. Select **PPPoA**. Type in your ISP **Username** and **Password**.

ISP Protocol

Please select the protocol below listed on your ISP worksheet.

Bridged

PPPoA

ISP Username

ISP Password

PPPoE

ISP Username

ISP Password

5. Select **Static**. Type in your single static **IP**. Don't type in a Subnet and Gateway IP address unless specified by your ISP.

IP Configuration

Please select your ISP addressing scheme listed on your ISP worksheet.

Dynamic

Static

IP

Subnet

Gateway

6. Select **Static**. Type in your primary and secondary DNS server IP addresses. Select the **Save and Restart** button at the bottom.

DNS Configuration

Dynamic

Static

Primary DNS

Secondary DNS

7. Select **Save and Restart**. The router will reboot with the new setup.



8. When the Power LED stops flashing, the configuration is complete.

