


Actiontec® 1520 and 1524

How to Change the LAN IP Address


1. Open your Web browser (Microsoft® Internet Explorer or Netscape®). In the location or address bar, type **192.168.0.1**. Select **Enter**.

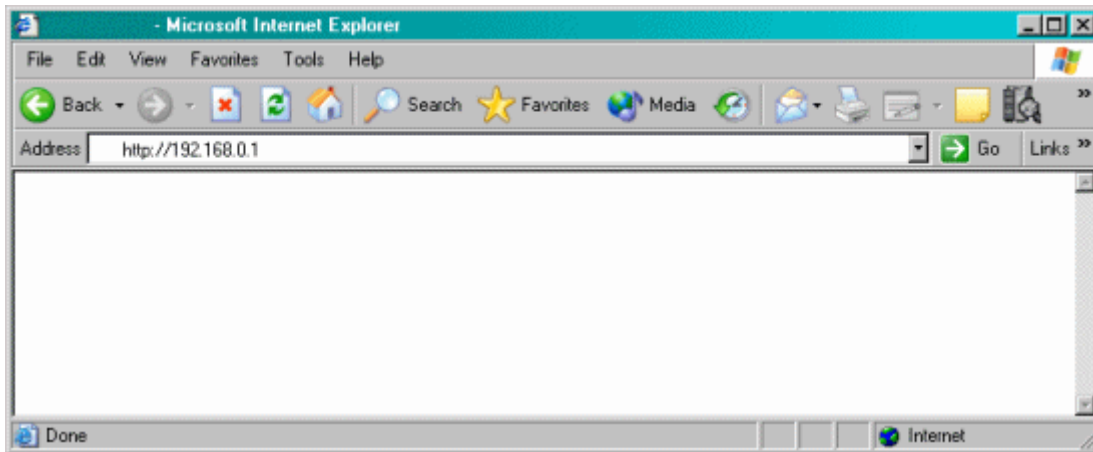

2. Select **Setup / Configuration**.



3. Select **Advanced Setup** from the options on the left.

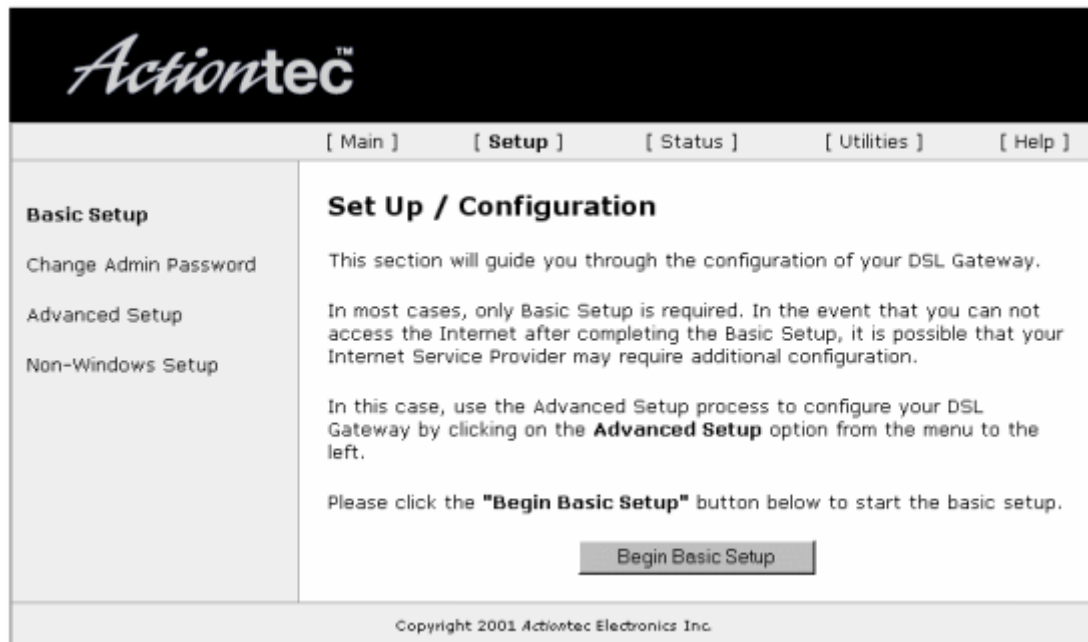

Actiontec™

[Main] [**Setup**] [Status] [Utilities] [Help]

Basic Setup

- Change Admin Password
- Advanced Setup**
- Non-Windows Setup

Set Up / Configuration

This section will guide you through the configuration of your DSL Gateway.


In most cases, only Basic Setup is required. In the event that you can not access the Internet after completing the Basic Setup, it is possible that your Internet Service Provider may require additional configuration.

In this case, use the Advanced Setup process to configure your DSL Gateway by clicking on the **Advanced Setup** option from the menu to the left.

Please click the **"Begin Basic Setup"** button below to start the basic setup.

Copyright 2001 Actiontec Electronics Inc.

4. Select **Begin Advanced Setup**.

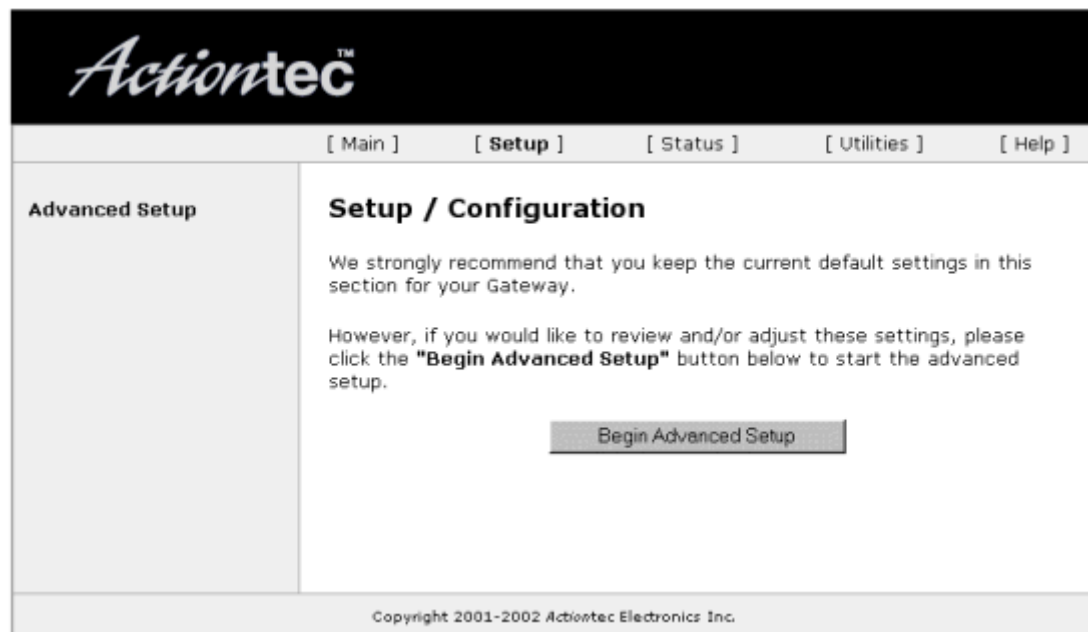

Actiontec™

[Main] [**Setup**] [Status] [Utilities] [Help]

Advanced Setup

Setup / Configuration

We strongly recommend that you keep the current default settings in this section for your Gateway.

However, if you would like to review and/or adjust these settings, please click the **"Begin Advanced Setup"** button below to start the advanced setup.

Copyright 2001-2002 Actiontec Electronics Inc.

5. Enter the new IP address and Netmask (Subnet mask). Select **Next**. Then select **Save and Restart** in the bottom left.

NOTE: You may also want to change the DHCP Server after doing this.

The screenshot shows the Actiontec web interface. At the top, there is a navigation bar with links for [Main], [Setup], [Status], [Utilities], and [Help]. The main content area is titled "LAN IP Address" and contains the following text: "We recommend that you keep the current default LAN IP Address of the Gateway as 192.168.0.1." and "To make changes, enter in the new IP Address value below. Click **Next** to continue." Below this text, there are two input fields: "LAN IP Address:" with a value of "192.168.0.1" (Device IP Address) and "LAN Netmask:" with a value of "255.255.255.0" (Device LAN Netmask). At the bottom of the form, there are two buttons: "Back" and "Next". On the left side of the interface, there is a sidebar menu with the following items: "Advanced Setup" (WAN IP Address, Wireless Settings, Wireless MAC Authentication, LAN IP Address, DHCP Server, Services Blocking, Website Blocking, VPN Pass Through, Remote Management, Port Forwarding, DMZ Hosting, Firewall, Dynamic Routing, NAT, Static Routing, MAC Address Cloning) and "Save and Restart". At the bottom of the page, there is a copyright notice: "Copyright 2001-2002 Actiontec Electronics Inc."

6. Select **Save and Restart**.



7. When the Power LED stops flashing, the configuration is complete.

