


Actiontec® 1520 and 1524

How to Set Up a PPPoA Dynamic IP Address (all Firmware Versions Except .49)

1. Open your Web browser (Microsoft® Internet Explorer or Netscape®). In the location or address bar, type **192.168.0.1**. Select **Enter**.

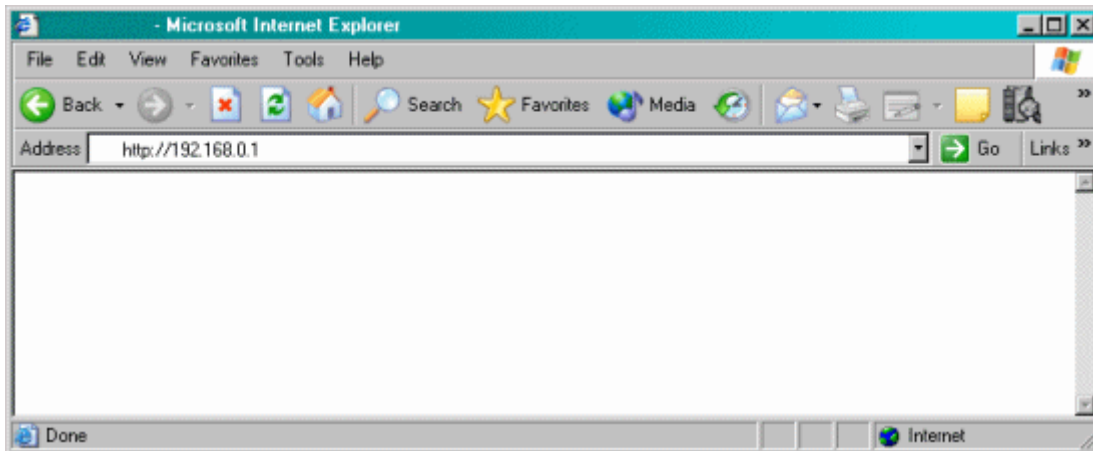

2. Select **Setup / Configuration**.



3. Select **Begin Basic Setup**.

Actiontec™

[Main] [**Setup**] [Status] [Utilities] [Help]

Basic Setup

Change Admin Password

Advanced Setup

Non-Windows Setup

Set Up / Configuration

This section will guide you through the configuration of your DSL Gateway.

In most cases, only Basic Setup is required. In the event that you can not access the Internet after completing the Basic Setup, it is possible that your Internet Service Provider may require additional configuration.

In this case, use the Advanced Setup process to configure your DSL Gateway by clicking on the **Advanced Setup** option from the menu to the left.

Please click the **"Begin Basic Setup"** button below to start the basic setup.

Copyright 2001 Actiontec Electronics Inc.

4. Select **Next**.

Actiontec™

[Main] [**Setup**] [Status] [Utilities] [Help]

Basic Setup

Basic Setup

Before you begin, please make sure you have completed the following steps below. Click **Next** to continue.

1. Your DSL Gateway is connected to your DSL line
2. Your computers are connected to your DSL Gateway

Copyright 2001 Actiontec Electronics Inc.

5. Select **PPPoA**. Select **Next**.

The screenshot shows the Actiontec web interface. At the top left is the Actiontec logo. Below it is a navigation bar with links: [Main], [Setup], [Status], [Utilities], and [Help]. On the left side, there is a sidebar with the text "Basic Setup". The main content area is titled "Broadband Connection". Below the title, there is a paragraph: "Please select the connection method that you use to access the Internet. Click **Next** to continue." Below this paragraph are two radio button options: "PPPoE" (unselected) and "PPPoA" (selected). At the bottom of the main content area are two buttons: "Back" and "Next". At the very bottom of the page, there is a copyright notice: "Copyright 2001 Actiontec Electronics Inc."

6. Type your **Username** and **Password**. Leave the Static IP field blank. Select **Next**.

The screenshot shows the Actiontec web interface. At the top left is the Actiontec logo. Below it is a navigation bar with links: [Main], [Setup], [Status], [Utilities], and [Help]. On the left side, there is a sidebar with the text "Basic Setup". The main content area is titled "DSL Broadband Connection - PPP". Below the title, there is a paragraph: "Please enter the **User Name**, **Password** and **Static IP** required by your DSL Internet Service Provider to access the Internet." Below this paragraph is another paragraph: "You may obtain this information from your DSL Internet Service Provider. Click **Next** to continue." Below these paragraphs are three input fields: "User Name", "Password", and "Static IP". At the bottom of the main content area are two buttons: "Back" and "Next". At the very bottom of the page, there is a copyright notice: "Copyright 2001 Actiontec Electronics Inc."

7. Select **Save and Restart**. The router will reboot with the new setup.



8. When the Power LED stops flashing, the configuration is complete.

