


Actiontec® 1520 and 1524

How to Set Up a PPPoA Single Static IP Address (all Firmware Versions Except .49)

1. If your Internet Service Provider (ISP) is Qwest.net™, you don't need to follow these steps. Just power-cycle the modem and your static IP address is assigned to the modem automatically.

For any other ISP, use the following steps to set up your static IP address.

2. Open your Web browser (Microsoft® Internet Explorer or Netscape®). In the location or address bar, type **192.168.0.1**. Select **Enter**.

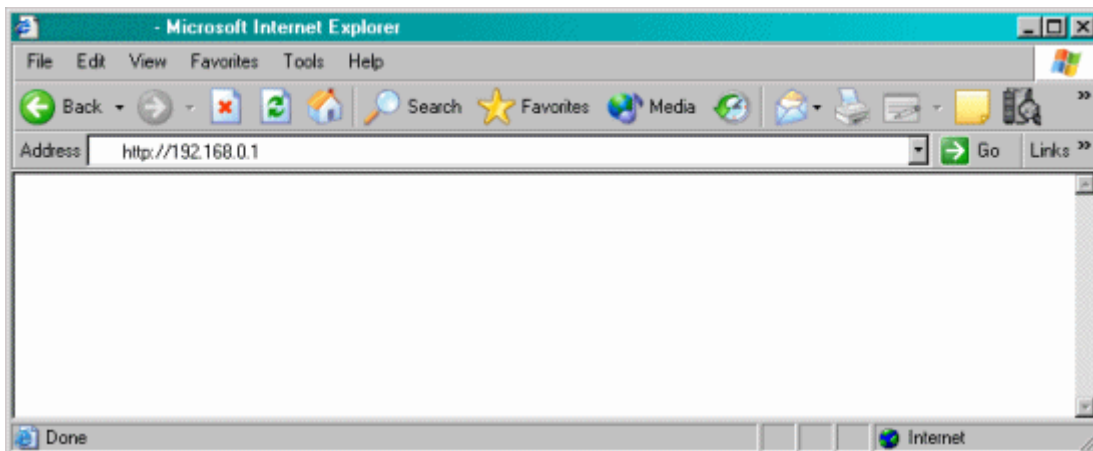

3. Select **Setup / Configuration**.



4. Select **Non-Windows Setup** from the options on the left.

Actiontec™

[Main] [Setup] [Status] [Utilities] [Help]

Basic Setup

Change Admin Password

Advanced Setup

Non-Windows Setup

Set Up / Configuration

This section will guide you through the configuration of your DSL Gateway.

In most cases, only Basic Setup is required. In the event that you can not access the Internet after completing the Basic Setup, it is possible that your Internet Service Provider may require additional configuration.

In this case, use the Advanced Setup process to configure your DSL Gateway by clicking on the **Advanced Setup** option from the menu to the left.

Please click the **"Begin Basic Setup"** button below to start the basic setup.

Begin Basic Setup

Copyright 2001 Actiontec Electronics Inc.

5. Select **PPPoA**. Type your **ISP Username** and **Password**. Scroll down.

ISP Protocol

Please select the protocol below listed on your ISP worksheet.

RFC1483 Bridged

RFC1483 Routed

PPPoA

ISP Username

ISP Password

PPPoE

ISP Username

ISP Password

- Under IP Configuration, select **Static**. Type your **single static IP**. Leave the Subnet and Gateway IP addresses blank unless specified by your ISP.

IP Configuration

Please select your ISP addressing scheme listed on your ISP worksheet.

Dynamic

Static

IP

Subnet

Gateway

- Under DNS Configuration, select **Static**. Type your **Primary** and **Secondary** DNS server IP addresses. Select the **Save and Restart** button at the bottom.

DNS Configuration

Dynamic

Static

Primary DNS

Secondary DNS

8. Select **Save and Restart**. The router will reboot with the new setup.



9. When the Power LED stops flashing, the configuration is complete.

