


Actiontec® 1520 and 1524

How to Restore Default Settings


1. Open your Web browser (Microsoft® Internet Explorer or Netscape®). In the location or address bar, type **192.168.0.1**. Select **Enter**.

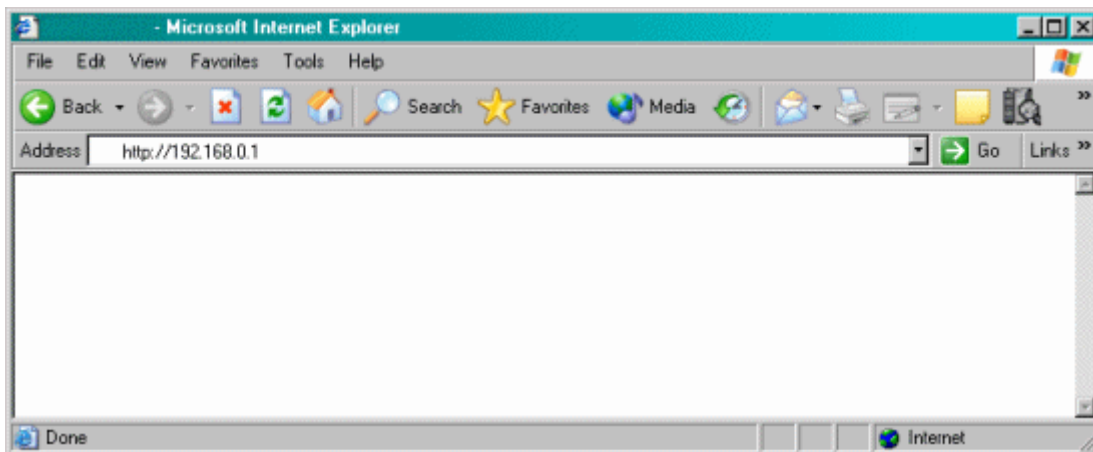


2. Select **Utilities**.



3. Select **Restore Default Settings**.

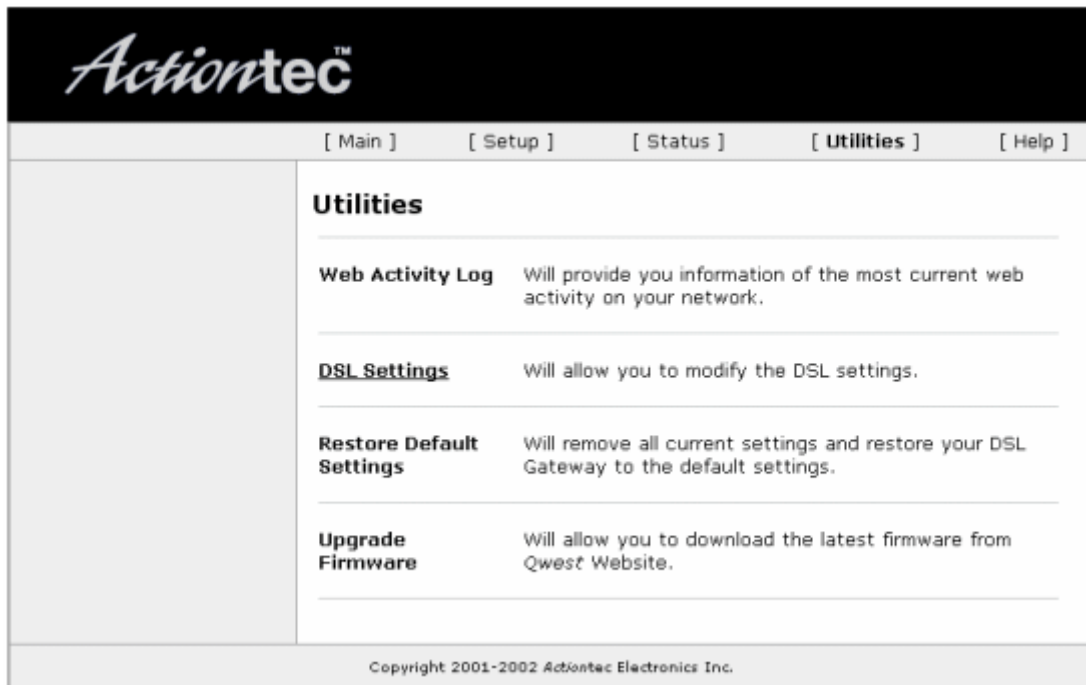

4. Select the **Restore Default Settings** button.

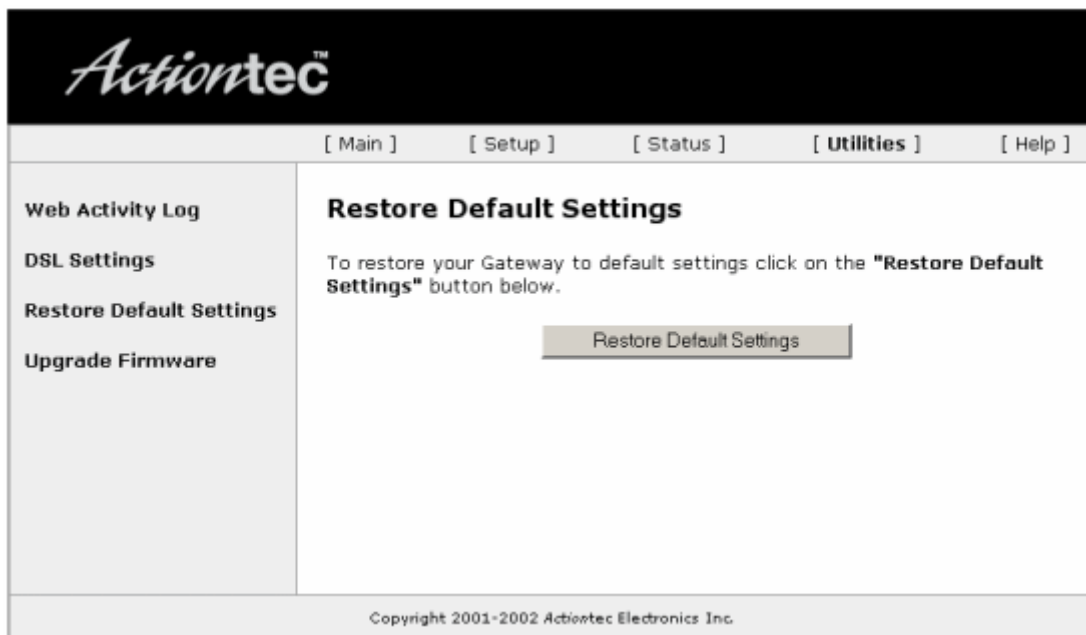

5. When the Power LED stops flashing, the configuration is complete.

