

## Qwest® Advanced Networking Modem: 2-Wire® 2701 HG

### Default Wireless Settings

Use this document if:

- You need to know what your modem default wireless settings are.

This document assumes:

- You are using the Qwest® Advanced Networking Modem: 2-Wire® 2701 HG.

The following list explains the default settings for your modem.

- **Wireless Radio**  
The Wireless Radio in your modem is turned on by default. The default configuration includes an encrypted 64 BIT WEP key out of the box.
- **Wireless LED**  
Even though the radio is on, the wireless LED will not illuminate until a valid wireless connection is established with the modem from an end device.
- **Wireless Channel**  
The default wireless channel is set to auto-detect the best channel in your environment.
- **Wireless SSID**  
The default wireless SSID is: 2WIREXXX  
The XXX in the SSID represents the last three digits of your modem serial number.
- **Wireless 64BIT WEP Key**  
The default WEP key appears on the bottom of your modem. The WEP key is the 10-digit number that follows the word "Key."

