


Arescom® NetDSL 800 Modem


How to Access the Modem Web Interface



1. Open your Web browser (e.g., Microsoft® Internet Explorer or Netscape®). In the location or address bar, type **192.168.1.1**. Then, select **Enter**.

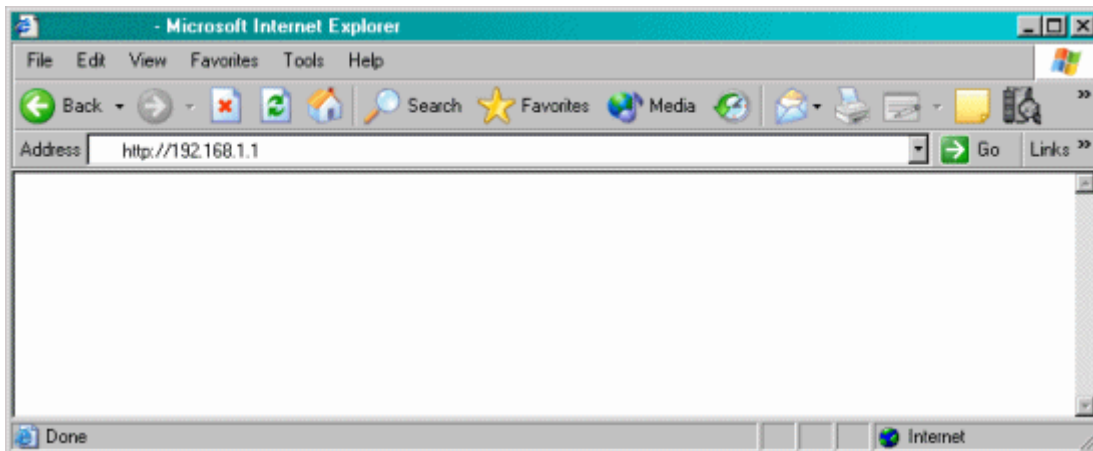

2. To troubleshoot, check these items:

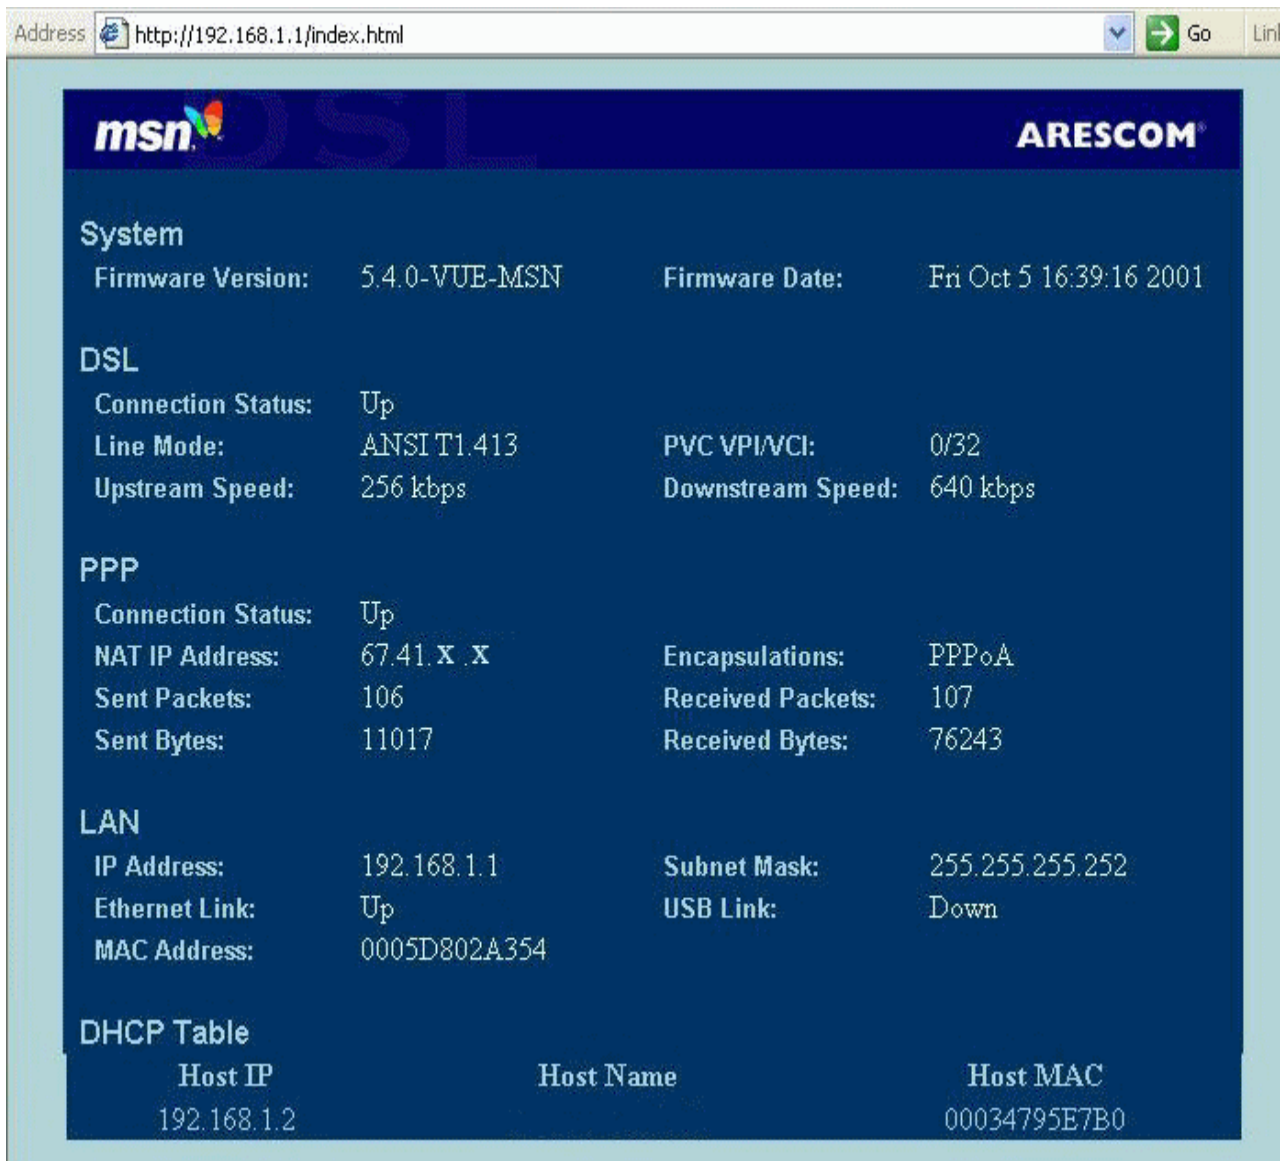- DSL Connection Status should be up; modem isn't trained if it's down
- PVC VPI/VCI should be 0/32
- PPP Connection Status should be up
- Encapsulations should be PPPoA
- Lan Ethernet link should be up when using Ethernet connection
- LAN USB link should be up when using USB connection
- DHCP Table lists connected computer IP address



Address  http://192.168.1.1/index.html  Go Lin

msn
ARESKOM

System

Firmware Version:	5.4.0-VUE-MSN	Firmware Date:	Fri Oct 5 16:39:16 2001
-------------------	---------------	----------------	-------------------------

DSL

Connection Status:	Up		
Line Mode:	ANSI T1.413	PVC VPI/VCI:	0/32
Upstream Speed:	256 kbps	Downstream Speed:	640 kbps

PPP

Connection Status:	Up		
NAT IP Address:	67.41.X.X	Encapsulations:	PPPoA
Sent Packets:	106	Received Packets:	107
Sent Bytes:	11017	Received Bytes:	76243

LAN

IP Address:	192.168.1.1	Subnet Mask:	255.255.255.252
Ethernet Link:	Up	USB Link:	Down
MAC Address:	0005D802A354		

DHCP Table

Host IP	Host Name	Host MAC
192.168.1.2		00034795E7B0