

Actiontec® PK5000

How to port forward



Use this document if:

- You want to port forward


This document assumes:

- You are using the Actiontec PK5000 modem

1. Open a web browser and navigate to <http://192.168.0.1>.

Address	192.168.0.1
---------	-------------


2. Select **Advanced Setup**.

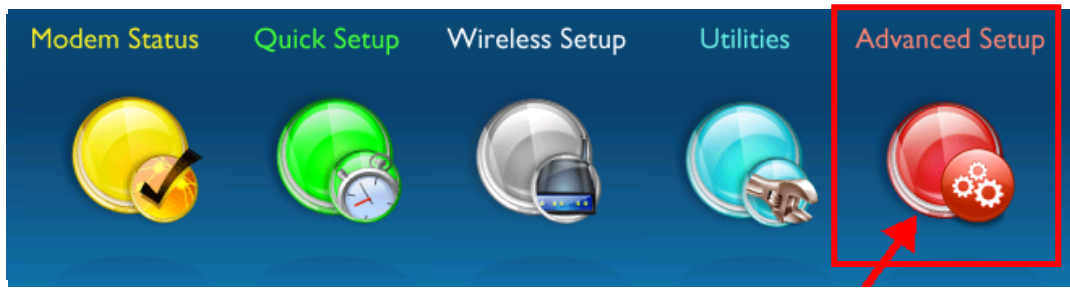

3. Scroll down and select **Advanced Port Forwarding**.



4. Enter the number of the port (or range of ports) that you want to forward in the **Starting Port** and **Ending Port** fields. Then enter the **Protocol**, and **LAN IP Address**.

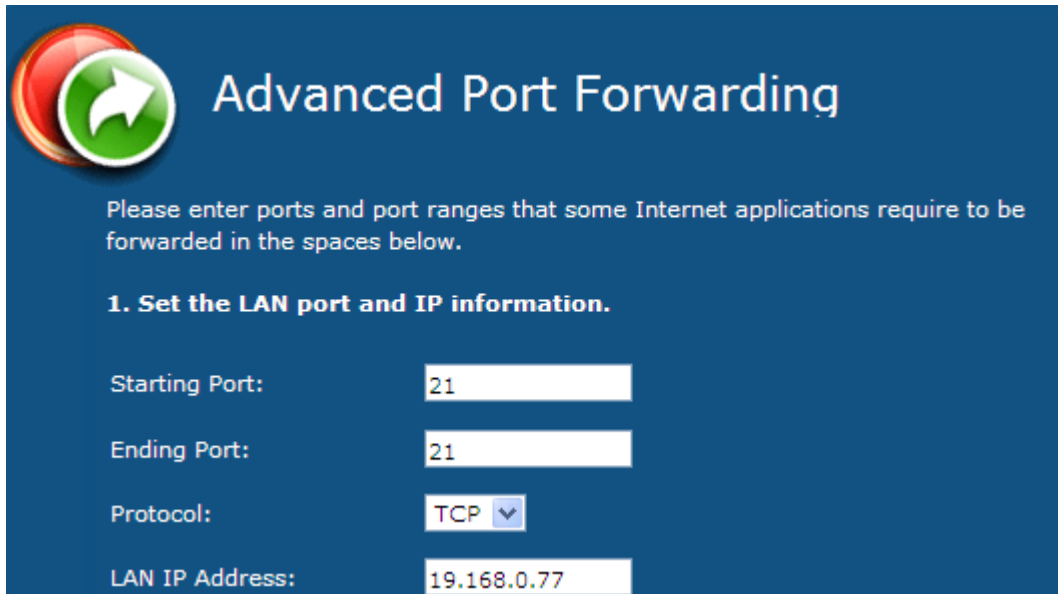

Advanced Port Forwarding

Please enter ports and port ranges that some Internet applications require to be forwarded in the spaces below.

1. Set the LAN port and IP information.


Starting Port:

Ending Port:

Protocol:

LAN IP Address:

5. Click **Apply**.

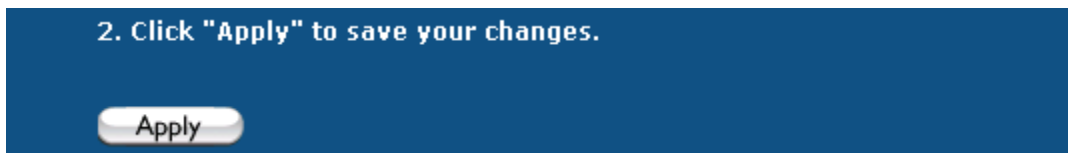

2. Click "Apply" to save your changes.

6. After the settings take effect, you will be able to see the changes at the bottom of the screen.

START/ END PORT	PROTOCOL	LAN IP ADDRESS	EDIT
21/21	TCP	192.168.0.65	<input type="button" value="Remove"/>