



Qwest® Standard Modem: Actiontec® GT701

How to Install USB Drivers – Windows® ME


1. Disconnect the purple USB cable that connects the Qwest® Standard Modem: Actiontec® GT701 to your computer.
2. Download the USB driver file **gt701-wg_usb_winme.zip**. Save the file to C:\temp, the default save location.
3. Open the USB driver file **gt701-wg_usb_winme.zip** saved on your hard drive.

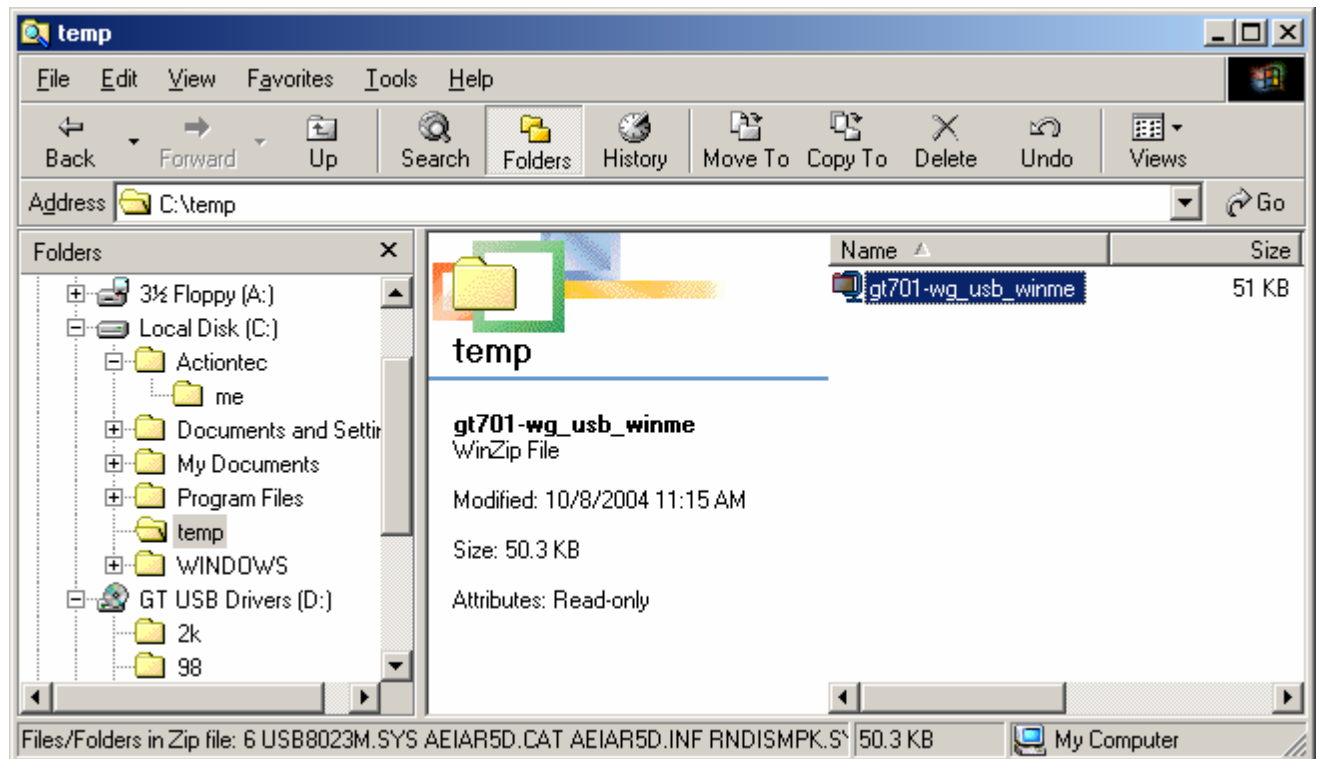


4. Select **Extract**.

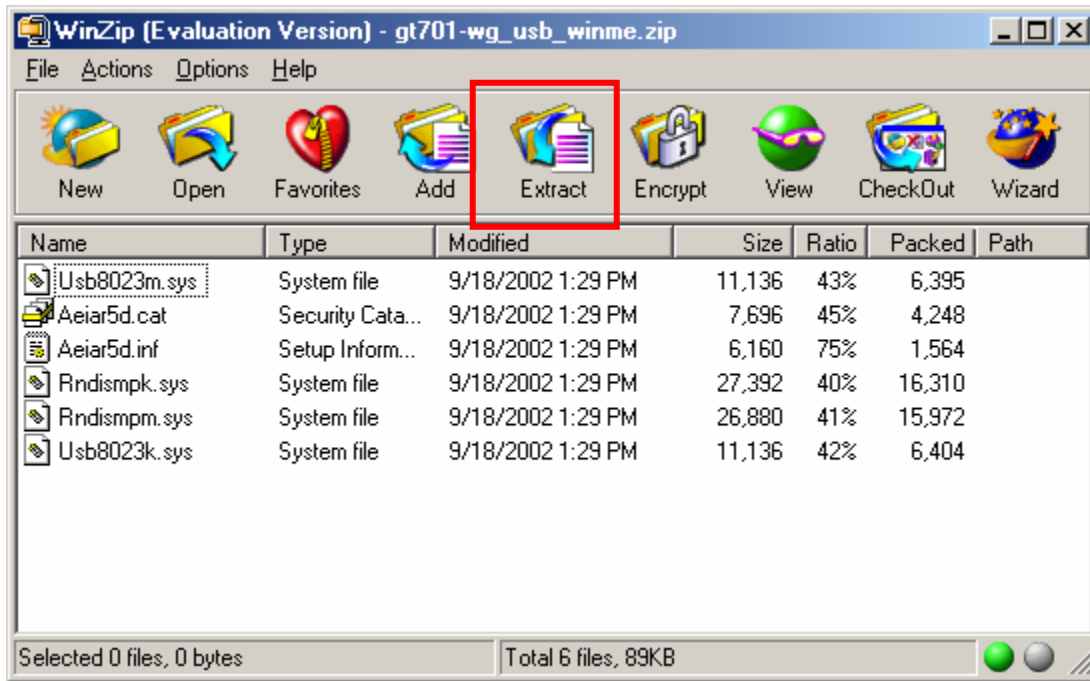

5. Select the **C:\temp** folder. Then select **Extract**.

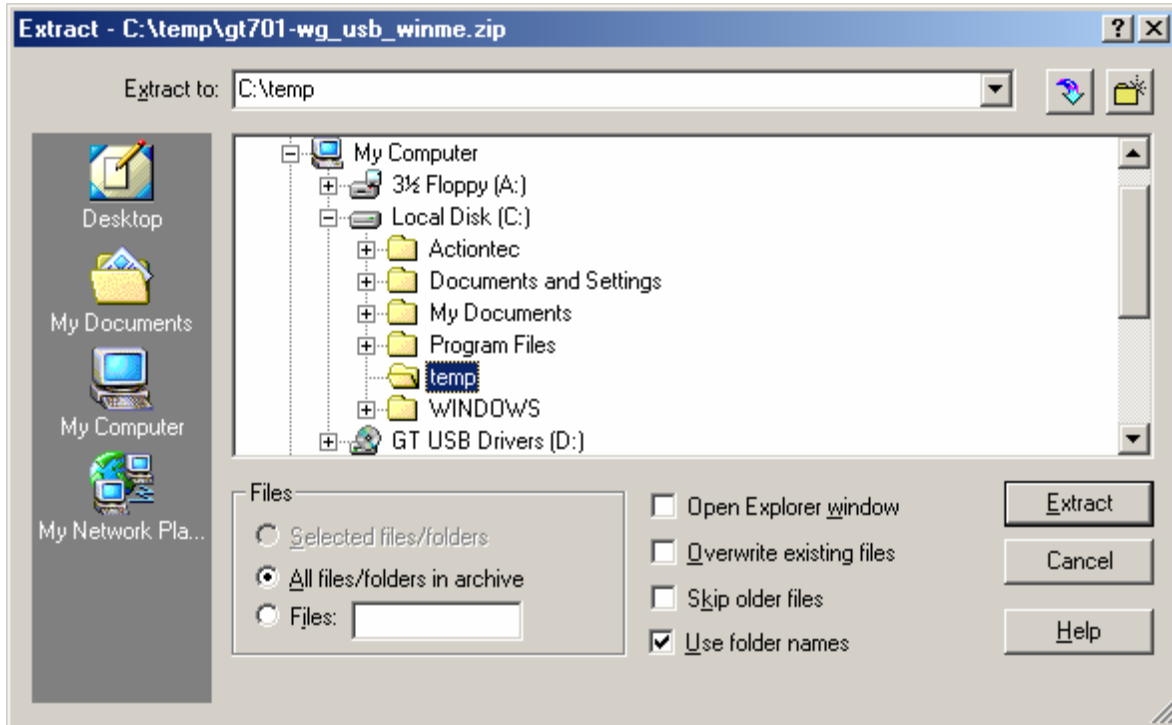

6. Close the WinZip® utility by selecting the **red X** from the options in the top right corner.

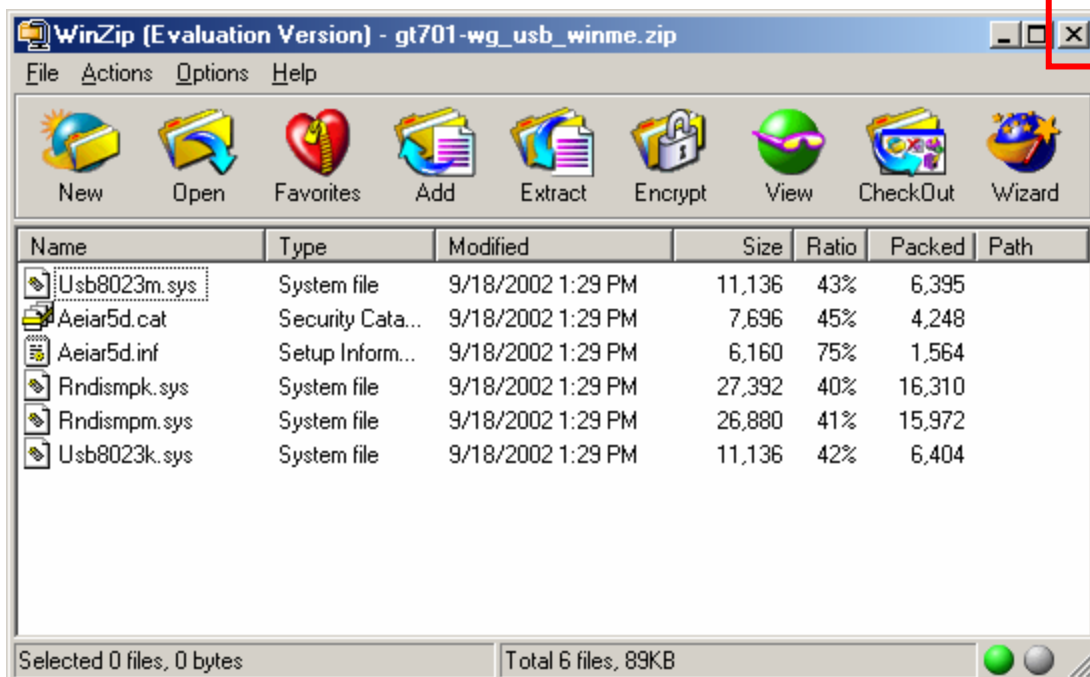


7. Reconnect the Purple USB cable from the modem to your computer.
8. Select **Specify the location of the driver (Advanced)**. Then select **Next**.




9. Select **Search for the best driver for your device. (Recommended)**. Then select **Specify a location** and select **Browse**.



10. Select **C:\temp**. Then select **OK**.

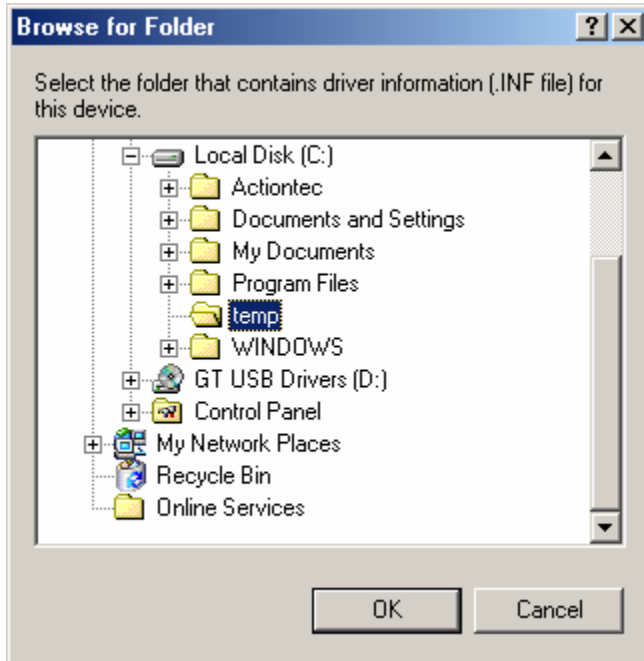

11. Select **Next**.

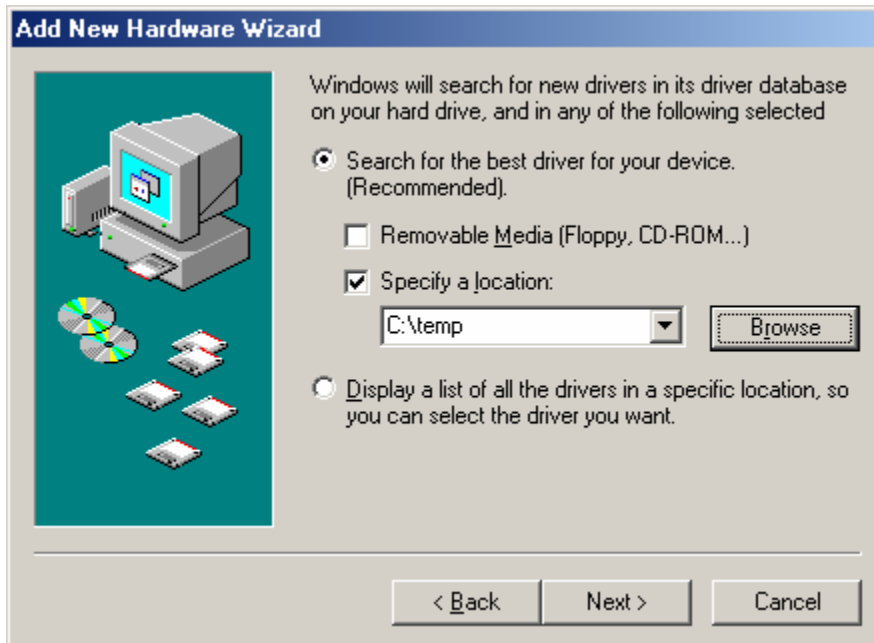

12. Select **Next**.



13. Select **Finish**.



14. If asked to reboot, select **Yes**.